

Installation And User Manual  
SCHOTT PERFORM™ POLY  
SCHOTT PERFORM™ MONO



SCHOTT  
solar

# PLEASE READ THIS MANUAL BEFORE INSTALLING OR USING THE MODULES

This manual contains important safety instructions that must be followed during the installation and maintenance of the SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO Photovoltaic (PV) Modules. Failure to follow these instructions may result in bodily injury or damage to property. Working on a photovoltaic system requires specialized knowledge and should only be performed by qualified professionals.

## Introduction

Thank you for choosing SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO PV modules. With over 50 years of experience in the production of photovoltaic products, SCHOTT is committed to producing high quality products that will last for over 25 years. Please review this manual before installing the PV modules. These instructions must be kept with the documentation for the solar system in which the PV modules are installed. **This manual does not constitute a warranty, expressed or implied. SCHOTT Solar does not take responsibility and disclaims any liability for loss, damage or expense arising out of or in any way connected with installation, operation, use or maintenance of PV modules. No responsibility is assumed by SCHOTT Solar for any infringement of patents or other rights of third parties that may result from the use of PV modules.**

SCHOTT Solar reserves the right to make changes to the product, specifications or installation manual without prior notice.

**Manufacturer:**  
SCHOTT Solar PV, Inc.  
5201 Hawking Drive, SE  
Albuquerque, NM 87106

# Installation And User Manual

## SCHOTT PERFORM™ POLY Photovoltaic Modules

## SCHOTT PERFORM™ MONO Photovoltaic Modules

SCHOTT PERFORM™ POLY 220, SCHOTT PERFORM™ POLY 225,  
SCHOTT PERFORM™ POLY 230, SCHOTT PERFORM™ POLY 235,  
SCHOTT PERFORM™ POLY 240, SCHOTT PERFORM™ POLY 245  
SCHOTT PERFORM™ MONO 245, SCHOTT PERFORM™ MONO 250  
SCHOTT PERFORM™ MONO 255

### Contents

1. WARNING NOTICES	4
2. SAFETY	4
2.1 General Safety	5
2.2 Handling Safety	5
2.3 Transport and Storage Safety	5
2.4 Installation Safety	5
3. MECHANICAL INSTALLATION INSTRUCTIONS	6
3.1 Site Selection	6
3.2 Tilt Angle Selection	6
3.3 Mounting and Installation	6
4. ELECTRICAL INSTALLATION INSTRUCTIONS	10
4.1 Grounding Overview	10
4.2 Grounding Methods	12
4.2.1 Grounding Lug with Thread-Cutting Screw at Grounding Hole	12
4.2.2 Grounding Lug with Machine Screw at Grounding Hole	12
4.2.3 Grounding Lug with Machine Screw at Mounting Hole	12
4.2.4 Grounding Clip at Grounding Hole	12
5. MAINTENANCE	13
6. SPECIFICATIONS	13



## 1 WARNING NOTICES

### Danger of Death from Electric Shock

Photovoltaic modules generate electricity when exposed to light. The maximum voltage from a single module when exposed to light is less than 50 V<sub>DC</sub>. However, when connected in series, the total voltage adds up and can be dangerously high. When the modules are connected in parallel, the current adds up and can be dangerous. When handling a PV module, following instructions must be practiced to avoid risk of arc formation, fire and electric shock.

- Only qualified & trained personnel should install a PV module.
- Do not wear metallic jewelry during installation.
- Do not install PV modules during wet conditions. Use only dry tools.
- Do not use damaged or defective modules. All damaged or defective modules should be stored in a carton to avoid exposure to light. Even damaged or defective modules can produce electricity
- Use caution when in contact with electrically active parts of a PV module such as terminals. There is always risk of burns, sparks and lethal shock even if the PV modules are not connected. PV systems can produce high voltage and current which could cause serious injury or death
- Do not expose PV modules to light concentrated with mirrors, lenses or other means.
- Use appropriate safety equipment (insulated tools, insulated gloves, etc) when working on wiring

The inverter can produce dangerously high voltage

- Be sure to follow all manufacturers' instructions before installing any PV modules.
- Use extreme caution when wiring or installing inverter.
- Be sure to shut down inverter before installing or removing PV modules.

When exposed to light, PV modules produce direct current. When disconnecting PV modules from a string, deadly arcing can occur.

- Never remove a PV module without disconnecting the inverter from the grid
- Never remove the PV module without disconnecting the PV system from the inverter.
- Make sure that the connectors are in good working condition and are properly connected to each other.

## 2 SAFETY

### 2.1 General Safety

- All PV modules should be installed in accordance with applicable codes and regulations, including , but not limited to the National Electrical Code (NEC)
- Roof mounted PV modules should be mounted on a fire resistant roof.
- Only PV modules with the same cell type and size should be connected in series.
- Follow all safety precautions for other components used in the system.

- Avoid uneven shade on the PV module surface. Shaded cells may become hot (“hotspot” phenomenon) which may result in permanent damage of the module.
- Do not use high pressure water spray or chemicals to clean the PV modules.
- Turn off inverters and circuit breakers immediately if a problem occurs.

## 2.2 Handling Safety

- Do not expose the PV module to excessive loads on the surface or twist the frame. The glass may break.
- Do not stand or step on the PV module. The glass may be slippery, and there is a risk of injury or electric shock if glass is broken.
- PV modules are heavy. Please handle with care.
- Do not hit or put excessive load on the glass or back sheet. PV cells may break.
- Do not twist the interconnect cable excessively.
- Do not drill holes in the frame. It may compromise the frame strength and cause corrosion of the frame and will void the warranty.
- Do not touch the PV module with bare hands. The frame of the PV module has sharp edges and may cause injury. Wear suitable gloves, such as leather gloves with padding in the palm and finger areas.
- Do not drop the PV module or allow objects to fall on the PV module.

## 2.3 Transport and Storage Safety

- Store the PV modules in a dry place. The packaging is not resistant to weathering. Modules must not be exposed directly to water (e.g. rain) during storage.
- Transport the modules to the installation site in the original packaging.
- Protect the module cables from mechanical stress during transport and assembly.
- Do not pull on the cables.
- Particularly when lifting the modules from the pallets, ensure that the modules are not pulled down at a slant over the edges of the frame. Photovoltaic modules with backing foil are particularly prone to mechanical stress.
- Check the modules for damage after unpacking.
- Do not install or commission damaged modules. Report any damage to the supplier immediately.

## 2.4 Installation Safety

- Always wear protective head gear, insulating gloves and safety shoes (with rubber soles).
- Due to the risk of electrical shock, do not perform any work if the terminals of the PV module are wet.
- Do not install PV modules in the rain, snow or windy conditions
- Insert interconnect connectors fully and correctly. Check all connections. Secure the cables to the PV module frames, support structure or raceway to prevent movement. Keep connectors out of direct sunlight.
- Do not touch the terminal box and the end of the interconnect cables with bare hands during installation or under sunlight, regardless of whether the PV module is connected to or disconnected from the system.
- Do not unplug a connector if the system circuit is connected to an operating load.
- Do not damage the back sheet of PV modules when mounting the PV modules.
- Do not damage the surrounding PV modules or mounting structure when replacing a PV module.
- Keep children away from the system while installing.
- Use UV resistant cable ties or other wire management hardware to secure inter-connect

cables. Drooping cables may cause various problems, such as leading to electrical shorts.

- When installing PV modules on roofs or other structures, use appropriate safety practices and safety equipment at all times to avoid injury.

## 3 MECHANICAL INSTALLATION INSTRUCTIONS

### 3.1 Site Selection

PV modules are intended for outdoor use only and not intended for use on any moving vehicles. In most applications SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO modules should be installed in a location where they receive maximum sunlight throughout the year. In the Northern Hemisphere the modules should be facing the southern sky; in the Southern Hemisphere the modules should face the northern sky. Avoid trees, buildings or other obstacles that can cast shadows on the modules. Take proper steps in order to maintain reliability and safety in case the PV modules are installed in areas that have heavy snow, extreme cold, strong winds, salt water exposure, or heavy dust. If you are planning to use the PV modules in marine environments, ensure that there is no direct salt water contact, use corrosion resistant mounting system/ electrical hardware, and clean the modules regularly to prevent salt deposits.

### 3.2 Tilt Angle Selection

SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO modules produce maximum power when sun's rays strike the module perpendicular to the module surface. To avoid performance losses in series circuits, ensure that all modules have the same tilt and orientation. Your solar professional will be able to determine the best tilt angle for your location.

### 3.3 Mounting and Installation


There are several approved ways to mount the SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO modules to a support structure. They may be mounted in either portrait or landscape orientation using either the bolt holes provided or using frame clamps (not provided). For all mounting methods a minimum gap of 1/4" (7 mm) between modules is required to allow for thermal expansion. For roof mounted systems a minimum gap of 1" between the module and the roof surface is required to allow for ventilation.

The modules may be fastened to a support using the bolt holes in the rear flange of the frame as shown in Figure 1. If desired, the fastener sequence may be reversed from that shown in Figure 1 (Nut inside the flange, bolt head protruding from mounting member). The module should be fastened at four points, with a 5/16" (M8) bolt, washers, including a lock washer and a nut (not provided). Note that the four mounting positions must lie in the same plane within 1/8" (3 mm) to avoid stressing the module when mounted. Similarly, the mounting structure must not deflect out of plane by more than 1/8" (3 mm) under anticipated loading conditions.

Inter-module type or end-type clamps must be designed for PV modules. They should have minimum dimensions as shown in Figure 2 and installed in accordance with the instructions below and drawings provided. The mounting clamps should be at least 1.5" (38 mm) long, at least 0.12" (3 mm) thick (for aluminum clamps) or 0.08" (2 mm) thick for stainless steel clamps, and have a catch width between 0.2" (5 mm) and 0.3" (8 mm). When installing, the clamp must overlap the support rail by at least 0.4" (10 mm) and be placed within the permissible clamping zones shown in Figure 3.


Do not overtighten clamps as the glass may be damaged.  
For the high load situations shown in Figure 3 an additional center support rail should be used. The center support should be attached to the mounting members with the rear flange of the module in contact with it. Attachment of the module to the center support is not necessary. Note that SCHOTT does not warranty frame clamps. The SCHOTT module warranty may be void if customer-selected frame clamps are improper or inadequate with respect to properties (including strength or material) or installation.

**Figure 1:**

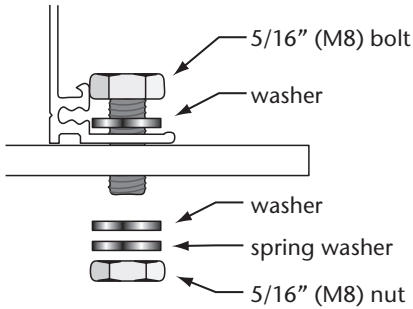

**Attachment Using Mounting Holes**

**Figure 2:**

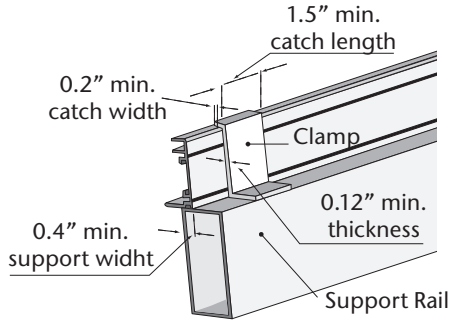

**Attachment Using Clamps**

**Figure 3:**  
**Attachment Guidelines – Both Portrait & Landscape Orientations**


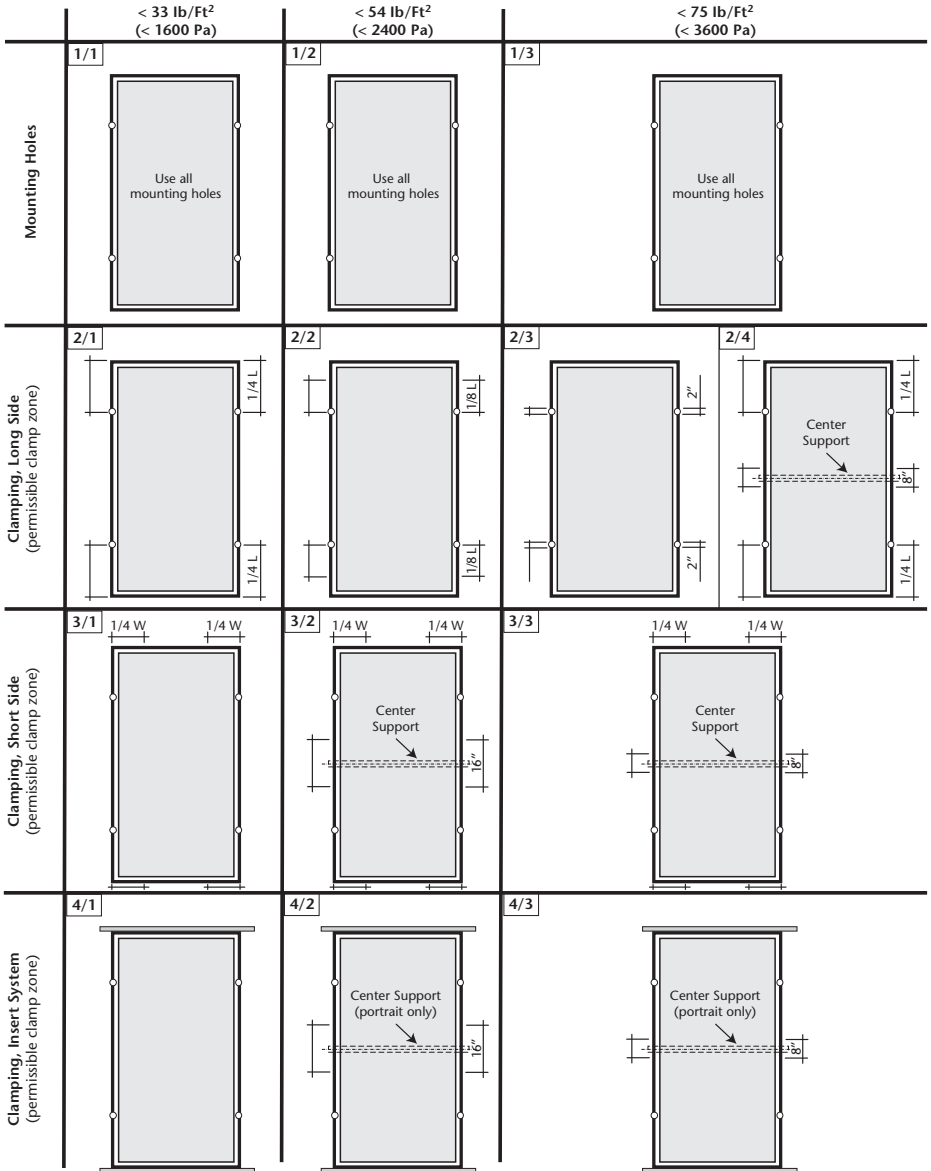




Figure 4:  
Module Geometry, Mounting and Grounding Holes

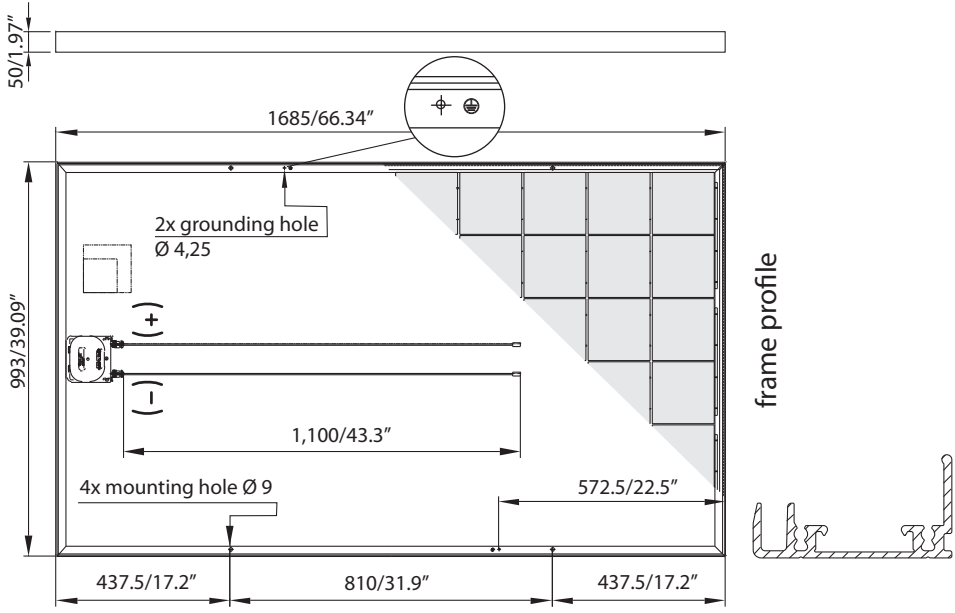

## 4 ELECTRICAL INSTALLATION INSTRUCTIONS

All SCHOTT PERFORM™ POLY and SCHOTT PERFORM™ MONO modules are pre-wired with (2) Tyco 4 mm<sup>2</sup> PV1-F 90°C UL listed wire and terminated with Tyco Solarlock connectors. The wire is intended for interconnection wiring of grounded and ungrounded photovoltaic power systems as described in the National Electrical Code, Section 690.31(A). **MINUS is marked on connector, POSITIVE is not marked. Make sure that all connections are not under load while being connected.** Care must be taken to arrange the system ground so that the removal of one module will not interrupt the grounding of any other modules. Under no circumstances should the junction box be opened. Series and parallel connections shall be made by using #10 (or 4 mm<sup>2</sup>) AWG 90°C type sunlight resistant output cables (or equivalent) with Male and Female Tyco™ locking connectors. Locking ring maybe required to comply with NEC 2008.

### Tyco mating connector part numbers

Wire Size	Polarity	Gender	Tyco Part Number
4.0 mm <sup>2</sup> /12 AWG	+	Female	4-1394462-8
6.0 mm <sup>2</sup> /10 AWG	+	Female	6-1394462-3
4.0 mm <sup>2</sup> /12 AWG	Neutral	Male	7-1394461-2
6.0 mm <sup>2</sup> /10 AWG	Neutral	Male	7-1394461-5

Select a suitable conductor diameter to minimize voltage drop. Conductors should be between 8-14 AWG (1.5-10 mm<sup>2</sup>) USE-2 (non conduit) THWN-2 (conduit) or check with your Solar professional to determine correct conductor sizing or wire. Over current protection shall be in accordance to NEC 240.

**NOTE: MAXIMUM SYSTEM VOLTAGE IS 600 V<sub>DC</sub>.** All installations, string sizing and electrical connections should be designed to meet the relevant NEC codes. A qualified solar professional should refer to the National Electrical Code 690-7(a) to determine the maximum number of SCHOTT POLY™ and SCHOTT PERFORM™ MONO modules that can be placed in series. Under normal conditions, a photovoltaic module is likely to experience conditions that produce more current and/or voltage than reported at standard test conditions. Accordingly, the values of I<sub>sc</sub> and V<sub>oc</sub> marked on this module should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor ampacities, fuses and the size of controls connected to the PPV output. Refer to section 690-8 of the National Electrical Code for an additional multiplying factor of 125 percent (80% derating) which may be applicable.


### 4.1 Grounding Overview

Several different methods of grounding can be used to provide the required connection through the frame anodizing. Before installation contact the local code Authority Having Jurisdiction (AHJ) to determine the proper grounding requirements. Attach all module frames to an earth ground in accordance with applicable articles of the National Electrical Code (NEC), 250 and 690.

- For listed devices, follow the instructions of the Grounding and Bonding Equipment manufacturer's installation instructions.
- If the frame mounting holes are not used to secure the module, they can be used for grounding.
- When using ground wire, select ground wire of copper, copper alloy or other suitable material no smaller than 14 AWG (2.1 mm), sized accordingly for the photovoltaic system per NEC, and sized compatibly with the Grounding and Bonding Equipment manufacturer's installation instructions.

## 4.2 Grounding Methods


### 4.2.1 Grounding Lug with Thread-Cutting Screw at Grounding Hole

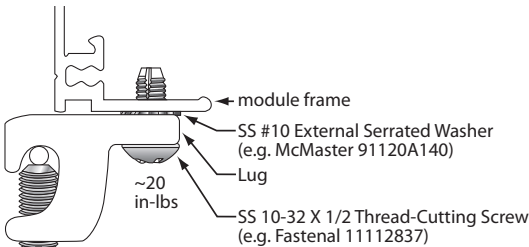

copper wire  
 #4-6 at 35 in-lbs  
 #8 at 25 in-lbs  
 #10-14 at 20 in-lbs

- Select a grounding lug listed for direct burial and outdoor use (tin-plated, solid copper lay-in lug with a stainless-steel set module frame screw) capable of accepting a 4-14 AWG copper conductor, e.g. ILSCO GBL4-DBT, Burndy CL50-1TN.
- To the grounding hole, secure the lug with stainless steel hardware consisting of a thread-forming/thread-cutting screw of at least 32 threads per inch and an external serrated washer. Tighten the screw until the serrated washer has penetrated the frame (approximately 20 in-lbs). Tighten the lug set screw to the copper wire at the torque specified by lug manufacturer.


### 4.2.2 Grounding Lug with Machine Screw at Grounding Hole

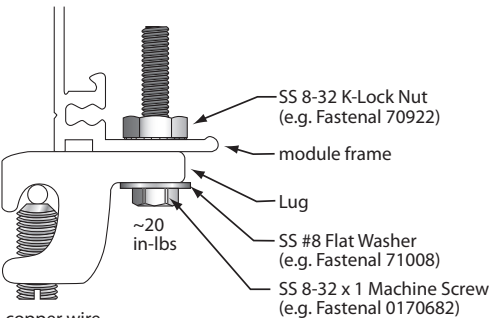

copper wire  
 #4-6 at 35 in-lbs  
 #8 at 25 in-lbs  
 #10-14 at 20 in-lbs

- Select a grounding lug listed for direct burial and outdoor use (tin-plated, solid copper lay-in lug with a stainless-steel set screw) capable of accepting a 4-14 AWG copper conductor, e.g. ILSCO GBL4-DBT, Burndy CL50-1TN.
- To the grounding hole, secure the lug with stainless steel hardware consisting of a machine screw (min#8), a flat washer, and a lock nut with integral serrated washer, as shown in the figure. A standard nut with separate external serrated lock washer may also be used. Tighten the nut to approximately 20 in-lbs.
- Tighten the lug set screw to the copper wire at the torque specified by lug manufacturer.


### 4.2.3 Grounding Lug with Machine Screw at Mounting Hole

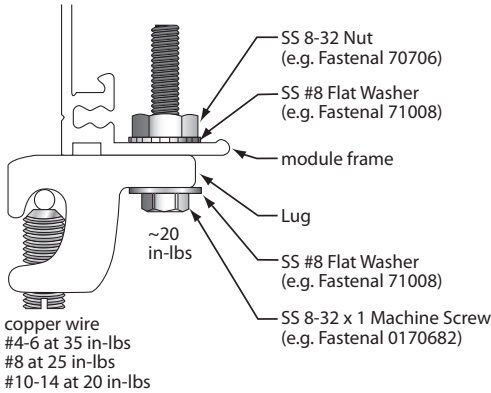

- Select a grounding lug listed for direct burial and outdoor use (tin-plated, solid copper lay-in lug with a stainless-steel set screw) capable of accepting a 4-14 AWG copper conductor, e.g. ILSCO GBL4-DBT, Burndy CL50-1TN.
- Use an emery cloth, sandpaper, or a steel brush to remove the anodizing coating on the frame. The area removed should be the same size as the lug mating face. Apply an anti-oxidation coating, e.g. Burndy Penetrox, Ideal Noalox.
- To the mounting hole, secure the lug with stainless steel hardware consisting of a machine screw (min#8), two flat washers, and a nut, as shown in the figure. Tighten the nut to approximately 20 in-lbs.
- Tighten the lug set screw to the copper wire at the torque specified by lug manufacturer.

### 4.2.4 Grounding Clip at Grounding Hole

- Select a grounding clip listed and designed to ground photovoltaic

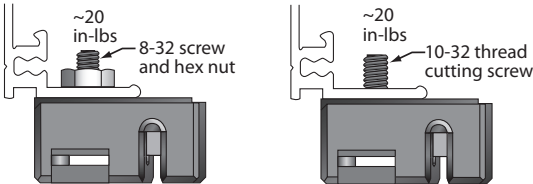

- modules, e.g. TYCO SolKlip.
- To the grounding hole, secure the clip per manufacturer's instructions and tighten the screw to 20 in-lbs.
- Insert copper wire into the wire slot per manufacturer's instructions.

### 4.2.5 Alternate Grounding Methods

Alternate methods of grounding the module may be permissible based on testing performed by mounting structure manufacturer or other third parties. Consult the manufacturer for details and certifications for such alternate methods. For any method, the user must ensure that the anodized coating is properly breached and sufficient fastener tension is employed to create and maintain a sound ground connection. If there is any doubt, consult with the Authority Having Jurisdiction (AHJ).

## 5 MAINTENANCE

SCHOTT PV modules are designed for long life and require little maintenance. If the angle of the PV modules is 5 degree or more, normal rainfall is usually sufficient to keep the module glass surface clean under most weather conditions. If dirt build-up becomes excessive, clean the glass surface only with a soft cloth using water. Do not use high pressure spray or chemicals to clean the modules. If cleaning the back of the modules is required, take utmost care not to damage the back side materials. In order to ensure proper operation of the system, please check all wiring connections and the condition of the wire insulation periodically.

## 6 SPECIFICATIONS

SCHOTT PERFORM™ POLY							
Maximum Power	(P <sub>max</sub> )	≥ 220	≥ 225	≥ 230	≥ 235	≥ 240	≥ 245
Open Circuit voltage	(V <sub>OC</sub> )	36.5	36.7	36.9	37.1	37.3	37.5
Short-Circuit Current	(I <sub>SC</sub> )	8.15	8.24	8.33	8.42	8.52	8.62
Operating Voltage	(V <sub>mp</sub> )	29.7	29.8	30.0	30.2	30.4	30.6
Current at V <sub>pmax</sub>	(I <sub>mp</sub> )	7.41	7.55	7.66	7.78	7.90	8.02
Maximum System Voltage		600 V					
Series Fuse Rating		15 A					
Weight		Approx. 41.5 lbs (18.8 kg)					
Dimensions		66.34" (1,685 mm) X 39.09" (993 mm) ± 0.118" (3 mm)					
Depth		1.97" (50 mm) ± 0.04" (1 mm)					
Maximum Load Nm <sup>2</sup>		3,600 Pa (75 lbs/ft <sup>2</sup> )					
<b>Temperature Coefficients</b>							
Power	(%/°C)	-0.44					
V <sub>OC</sub>	(%/°C)	-0.32					
I <sub>SC</sub>	(%/°C)	+0.04					
SCHOTT PERFORM™ MONO							
Maximum Power	(P <sub>max</sub> )	≥ 245	≥ 250	≥ 255			
Open Circuit voltage	(V <sub>OC</sub> )	37.1	37.3	37.5			
Short-Circuit Current	(I <sub>SC</sub> )	8.4	8.5	8.6			
Operating Voltage	(V <sub>mp</sub> )	30.9	31.1	31.3			
Current at V <sub>pmax</sub>	(I <sub>mp</sub> )	7.9	8.0	8.1			
Maximum System Voltage		600 V					
Series Fuse Rating		15 A					
Weight		Approx. 41.5 lbs (18.8 kg)					
Dimensions		66.34" (1,685 mm) X 39.09" (993 mm) ± 0.118" (3 mm)					
Depth		1.97" (50 mm) ± 0.04" (1 mm)					
Maximum Load Nm <sup>2</sup>		Pressure 3,600 Pa (75 lbsft)					
<b>Temperature Coefficients</b>							
Power	(%/°C)	-0.44					
V <sub>OC</sub>	(%/°C)	-0.33					
I <sub>SC</sub>	(%/°C)	+0.03					

The electrical characteristics are within ± 10 percent of the indicated values of I<sub>SC</sub>, V<sub>OC</sub> and P<sub>max</sub> under Standard Test Conditions (irradiance of 100 mW/cm<sup>2</sup>, AM 1.5 spectrum, and a cell temperature of 77°F (25°C)).







**For further information:**

**SCHOTT Solar PV, Inc.**  
U.S. Sales and Marketing  
Toll free: 888-457-6527  
Email: [solar.sales@us.schottsolar.com](mailto:solar.sales@us.schottsolar.com)  
[www.us.schottsolar.com](http://www.us.schottsolar.com)

U.S. Production Facility  
5201 Hawking Drive, SE  
Albuquerque, NM 87106

**SCHOTT**  
solar